AC1200 Dual-band Gigabit Wi-Fi Router


Quick Start Guide

V1.0.2

1282300100M7

Package contents: Router ×1, Power Adapter ×1, Ethernet Cable ×1, Quick Start Guide ×2.

Connect the Device

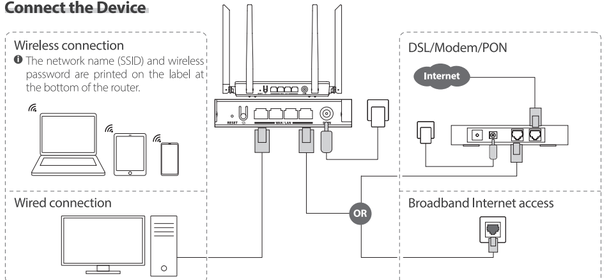

- Power off the modem, and remove the backup battery if it uses.
- Make sure that the router is close to a power outlet and near Ethernet cables for wired computers.
- Place the router horizontally and orient the antennas vertically.

Images may differ from the actual product.

LED and Buttons

LED Patterns

LED Status	Device Status
Flashing green	Mesh networking is in progress
Solid green	Internet connected
Solid red	No Internet connection
Green & Red	Updating firmware
Off	Device is powered off
	LED is turned off

Reset Button

Press and hold the button for more than 5s to reset the router to its factory mode.

Mesh Button

Press the button briefly to start the Mesh process.

Mesh networking function is turned on by default. You can log into the router management platform to disable it.

Set Up the Network

Method 1: Use a Web Browser

1. Connect your device to the router wirelessly or with an Ethernet cable.

   - The default Wi-Fi network name (SSID) is printed on the label at the bottom of the router.
   - For security, change to a unique SSID and assign a password.



3. Follow the on-screen instructions to set up the Internet connection.

2. Launch a web browser. Key in **http://imouwifi.net** in the address bar. Read and accept the agreement and click Try Now.



Method 2: Use the Imou Life App


1. Download the Imou Life App.

Download on the App Store | GET IT ON Google Play | Imou Life **OR**

2. Open the Imou Life App and log in.

If you are a new user, please register an account first.

3. Add your devices. Follow the instructions on the app to complete the setup and connect to the internet.



Mesh Network Setup

- This router is empowered by the "Imou Link" 2.0 Mesh networking, forming a Mesh network through wired, wireless or parallel connections. It is not compatible with routers that using "Imou Link" 1.0 Mesh networking.
- Mesh network is exclusive to Imou routers that support Mesh network.

Method 1: Via a Web Browser

Visit **http://imouwifi.net**, and log in with your ID and password. Click **Mesh Network** at the upper right corner and follow the step-by-step instructions to complete the setup.




Method 2: Using the Physical Button

1. Plug in all routers and power them on. Ensure that the main router is connected to the Internet. Ensure that the satellite node is reset. If it is not, press its MESH/RESET button for 5 seconds to reset.

2. Choose a connection method

For the wireless connection, place the main router and the satellite nodes within 3 meters (9.84 ft).


A. Wired Connection



B. Wireless Connection



C. Parallel Connection

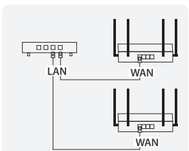

3. Press the MESH/RESET button on the main router to initiate automatic mesh networking. When the LED indicator flashes red, the mesh networking process is ongoing. When the LED indicator turns into solid green, the mesh networking is completed.

If you need to configure multiple satellite nodes, please repeat the steps above.

FAQ

Q1: What should I do if I can't access the router's management page?

- Reboot your router and try again.
- Check your Wi-Fi connection.
- Use another Web browser such as Google Chrome.
- Restart your device.

Q2: What should I do if I can't access Internet?

- Reboot your modem and router, then try again.
- Check the Internet is working. With an Ethernet cable connecting the modem to the computer directly.

Q3: What should I do if I forget my Web management page password?

- Check the Web password on the label at the bottom of the router.
- When the router is power on, use a pin to press and hold the RESET button on the back until the LED blinks. Then the password will restore to the default that marked on the label.

Q4: What can I do if my Wi-Fi devices cannot connect over Wi-Fi to the router?

Please try to check:

- You have enabled the router's SSID network and it displays in your Wi-Fi client's scanning list.
- You have entered the correct Wi-Fi password when connecting your devices to the Wi-Fi network.

If you failed to address the problem, you can reset the router to factory default settings.

Imou Support

For the user guide, support, and more information, please visit **https://www.imou.com/support**

Email **service.global@imoulife.com** to give suggestions.

Follow **@imouglobal** to get more brand information.